


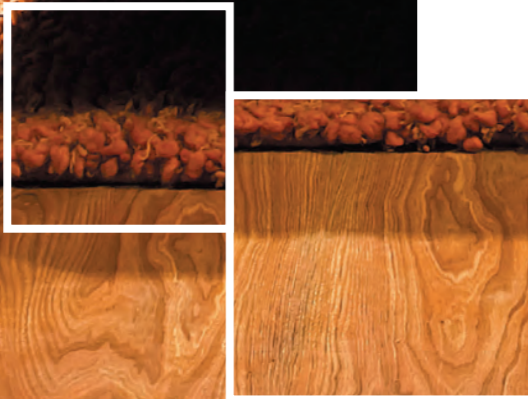

PARQÉ

Pleasing the eye, and perfected on the back years of researches for the authentic and lifelike surface.

Modecor is proud to present its wide range of laminate floors which are complementary to any interior theme – Traditional or Modern.

Years of pleasure are guaranteed by innovative technology. These floors are tough enough to stand up of what life demands while still retaining their inherent beauty and elegance.



Product Characteristics	Test Method		
Usage	EN 13329	Class 23 / 31	Class 23 / 32
Wear Resistance		AC 3	AC 4
Impact Resistance		IC 1	IC 2
Stain Resistance		Group 4/5	Group 4/5
Resistance to Cigarette Burns		Class 4	Class 4
Color Fastness		Class 7	Class 7
Slip Resistance	ANSI A 1264-2-2001	(0.5) Dry Coefficient of friction	(0.5) Dry Coefficient of friction
Indentation Resistance	DIN 52185	>600 kg/cm ²	>600 kg/cm ²
Electrostatic Charge	DIN 54345	0.9 kv	0.9 kv
Fire Resistance	DIN 4102	B1	B1

PARQÉ ADVANTAGES


1. Modacor location and the state-of-the-art German machineries and technology allowing us to penetrate and compete in the major global markets presenting world class products, offering premium technical support, fast products delivery ensuring an excellent price/quality ratio.

2. Product mix includes wide range of contemporary and unique colors & textures not easily available in the GCC and Middle East markets.


3. Modacor has achieved ISO 9001-2008 certification and all products meets the international standards as EN (European Norm) and others as ASTM (American Society for Testing and Materials).

4. Parqe by Modacor advantages:

- German technology and German raw materials to assure offering the best flooring quality and money value
- Consist of four layers: high resistance overlay; high quality decorative paper, High Density Fiberboard (HDF) and Balancing Paper
- Wide range of more than fourty contemporary colors selection and texture variety
- Accessories matching colors availability
- Scratch resistance and 30 times tougher than most of natural wood parquet
- Fire and burn marks resistance
- Wear, Impact, Stain and Indentation resistance
- Easy to install (glue free) and maintain
- Easy to clean, does not generate dust and do not require any sanding or polishing
- Up to 20 years warranty

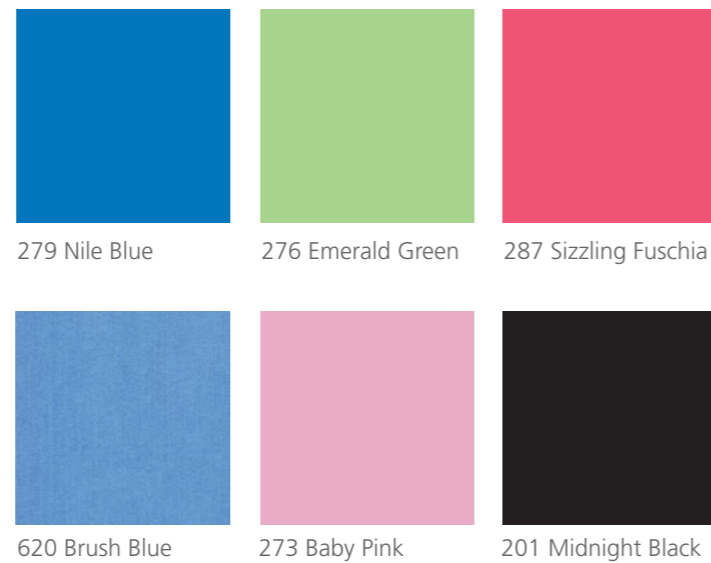


New Collection



102 Glacier White

COLORS COLLECTION

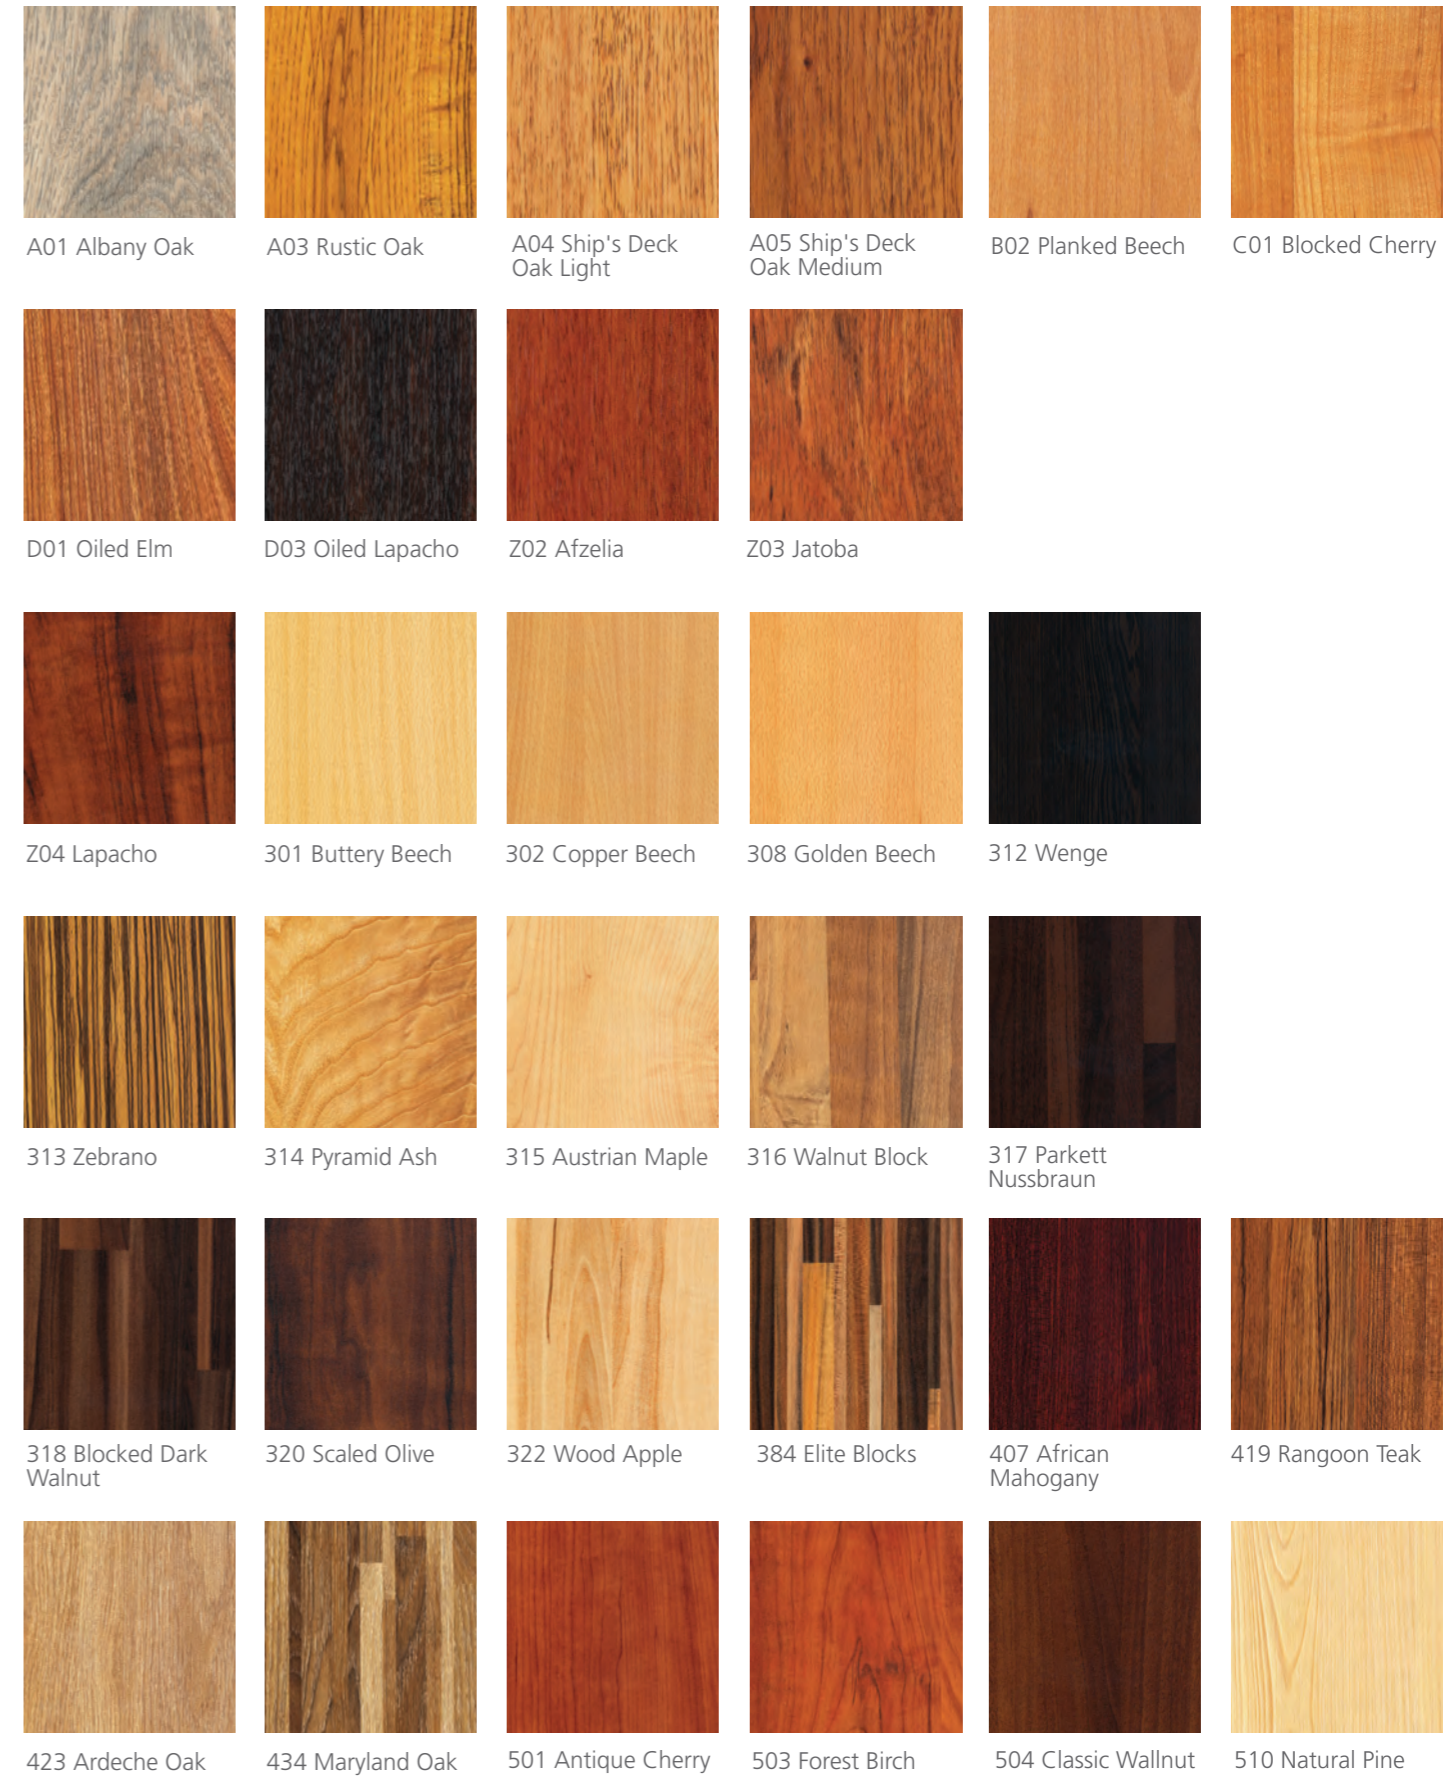

PARQÉ INSTALLATION

Glue free installation – get a perfect result quick & easy.

IMPORTANT!

For a good end result and validity of the warranty:









- Store your Parqe floor flat in unopened packages at normal room temperature for at least 48 hours prior to installation.
- The Parqe floor is to be installed as a floating floor. Make certain the correct distance from the walls is maintained (5-8 mm gap).
- Do not install the floor in wet or damp rooms, such as bathrooms or rooms with a floor drain.
- To help protect the floor, a doormat should be laid inside all external doorways.
- Use felt pads on furniture legs to prevent scratching.

Preparations


The floor should not be glued or fixed to the subfloor or walls in any way. With the climatic changes, the flooring will expand and contract very slightly, therefore a minimum of 5-8 mm expansion space should be left to walls, thresholds, pipes and other fixed objects. An expansion profile must be used in door openings, angled rooms, returning corners in corridors and if the flooring is longer than 12m or wider than 8m. The subfloor must be dry (max 60% RH, at 18°C), even (3 mm/2m; 1.2 mm/0.25 m) and clean. If you have under-floor heating, please speak to your retailer. Parqe can be installed on vinyl, linoleum, wood and ceramic tiles. Remove textile carpets and underlay before installing. On concrete floors including those with vinyl tiles installed, first place a 0.2 mm polyethylene film with an overlap of 200mm. Check that the planks are without defects and undamaged before installing.

Installation

Start the installation in the left-hand corner of the room with the tongue facing the wall. Use spacers to secure the correct expansion gap. The planks are assembled by putting the tongue into the groove of the installed plank at an angle of approximately 30 degrees by pushing the plank gently down to lock the joint. Start with the short side joint and place the long side as close to the installed plank as possible. After the short side joint is assembled, gently lift up the long side joint and press it into the joint before you angle it down. Install the planks in order according to picture 8. The off-cut from cutting the last plank in one row is used to begin with in next row. Ensure that end-joints are more than 200mm apart. Continue this way during the entire installation.

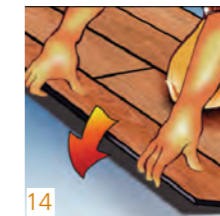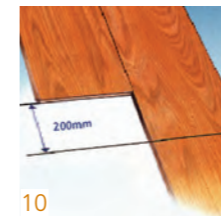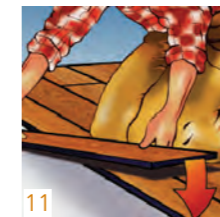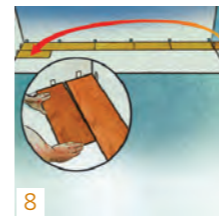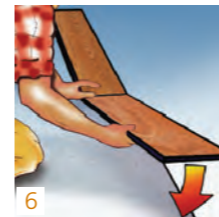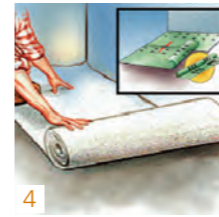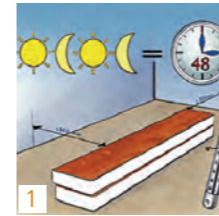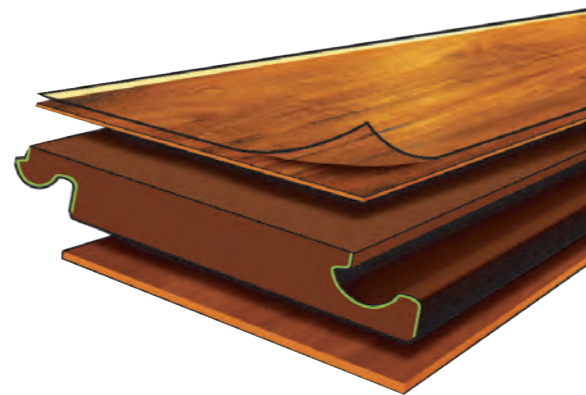

Accessories:

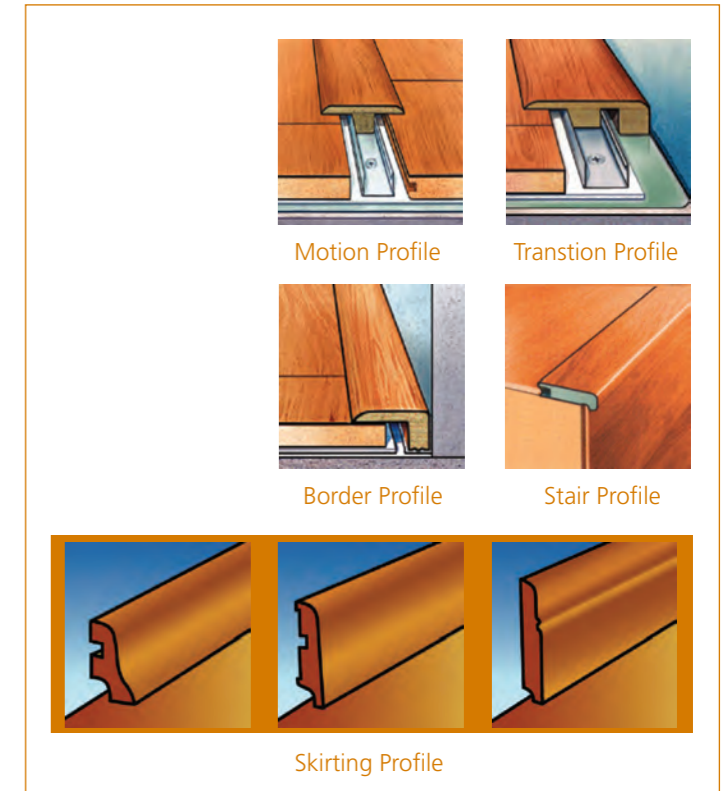

Maintenance

For normal cleaning, use a vacuum cleaner without the beater bar and when necessary a damp mop with some mild detergent. Never use any wet or steam cleaning equipment. Never sand, wax or polish the flooring. Stubborn stains may be removed with methylated spirits or similar and cotton wool.